


Sprinkler Wrench List

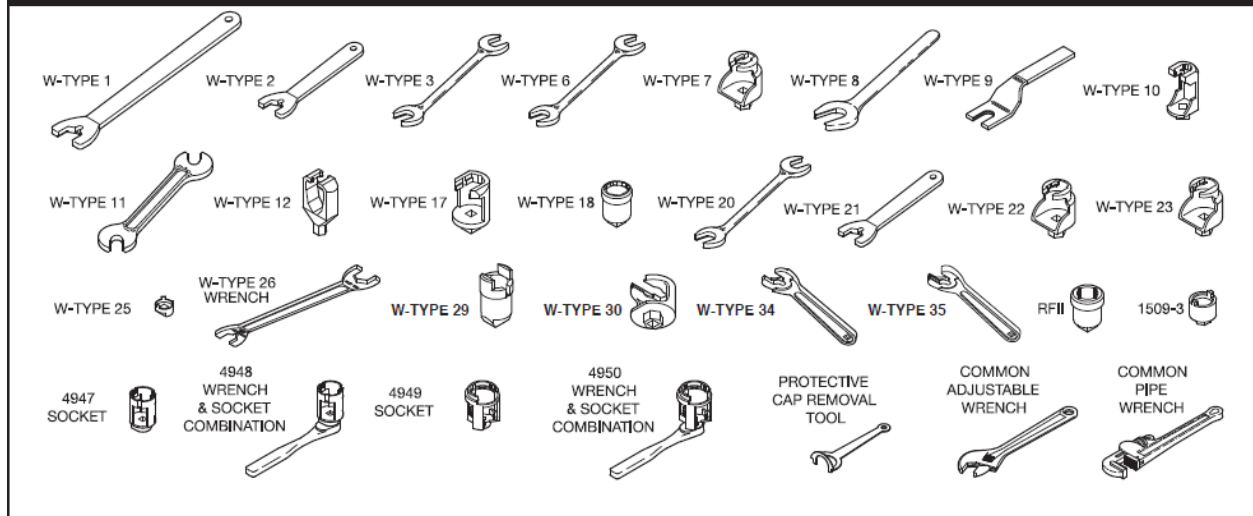

| <i>Wrench Type</i> | <i>Wrench used with the following Sprinkler Models:</i> | <i>Part No.</i> |
|-----------------------------|---|-----------------|
| W-Type 1 | EC-25, ESFR-25, ESFR-22 | 56-872-1-025 |
| W-Type 2 | ESFR Pendent | 56-872-1-001 |
| W-Type 3 | BB1 17/32, EPEC, EC-8, EC-11, EC-14, EC-17, ELO SW-20, ELO SW-24, ELO-231, ELO-231 B, ELO-231 FRB, LD | 56-895-1-001 |
| W-Type 6 | CC2, EC-5, LFII, TY-B, TY-FRB | 56-000-6-387 |
| W-Type 7 | CHEC, DS-1, EC-5, LFII, TY-B, TY-FRB, TY-FRFS, TY-FS, TY-FS Special | 56-850-4-001 |
| W-Type 8 | DS-3, K17-231, Ultra K17 | 56-892-1-001 |
| W-Type 9 | TY-FRL, TY-L | 56-000-1-849 |
| W-Type 10 | TY-FRFS, TY-FS, TY-FS Special, TY-L | 56-000-1-948 |
| W-Type 11 | Issue D Quartzoid, Type EA-1, D3, D3S, Type 1 & 2 | 56-452-1-001 |
| W-Type 12 | TY-FRL | 56-798-1-001 |
| W-Type 17 | DS-2 | 56-010-4-118 |
| W-Type 18 | ELOC, LFII | 56-000-1-265 |
| W-Type 20 | CC1, HIP, WS | 56-000-1-106 |
| W-Type 21 | ESFR-17 (Used for SIN TY6226 Only) | 56-001-0-686 |
| W-Type 22 | EC-11, EC-14 | 56-665-7-001 |
| W-Type 23 | EC-8 | 56-000-6-838 |
| W-Type 25 | Tyco Raven Institutional | 56-314-1-001 |
| W-Type 26 | ESFR-17 Dry-Type | 56-341-1-001 |
| W-Type 29 | Type IFP AQUAMIST | 28241 |
| W-Type 30 | ESFR-17 | 56-001-0-688 |
| W-Type 34 | ESFR-14 | 56-462-1-001 |
| W-Type 35 | ESFR-17 | 56-463-1-001D |
| RFII | DS-C, DS-ECC, RFI | 56-000-1-075 |
| 1509-3 | TFP MAX, TFP PH2, TFP PH5 | 56-001-5-093 |
| 4949 Socket | LFII | 56-000-4-949 |
| 4950 Wrench & Socket Combo | LFII | 56-000-4-950 |
| Protective Cap Removal Tool | LFII | 56-000-4-300 |
| Pipe Wrench | DS-1, DS-2, DS-C, DS-ECC | N/A |
| Adjustable Wrench | BB1, BB2, BB3, SD1, SD2, SD3, Type D4a, F822 thru F834, HV-14 thru HV-60, Issue A & B, B-1 | N/A |